

# Installation Instructions

## English Section InView P22R Adapter Plate

Catalog Number 2706-PNR2





### English Section

# InView P22R Adapter Plate

(Catalog Number 2706-PNR2)

## Overview

 
For additional information, refer to:

- InView User Manual, publication 2706-UM016.
- InView P22R Installation Instructions, publication 2706-IN014.
- The InView publications can be found in the Manuals-On-Line section of [www.ab.com](http://www.ab.com) or [theautomationbookstore.com](http://theautomationbookstore.com).

## Adapter Plate Mounting

The following steps provide instructions for installing the adapter plate in an existing DL40 Plus four-line display panel opening.

1. Drill the appropriate mounting holes in the enclosure or panel.

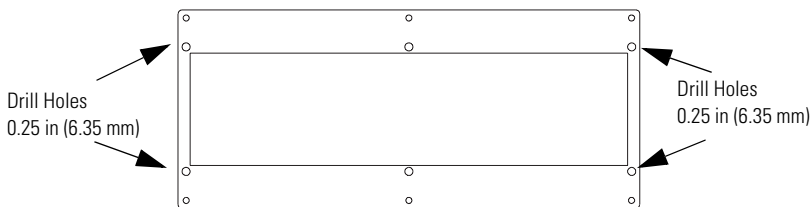

2. Remove the six mounting nuts from the hardware bag provided with the plate.
3. Position the adapter plate (2706-PNR2) in the panel or enclosure mounting hole.
4. Install nuts and alternately tighten the nuts to a torque of 0.904 Nm (8 in-lb).


# InView Display Mounting

 The following instructions provide panel cutout dimensions for the InView P22R Panel Mount Display.

The InView P22R mounts in a custom panel or enclosure. When it is properly installed, the faceplate provides a NEMA Type 12, 13, and 4X(indoor) rating. To install the InView Display:

1. Cut and drill the appropriate mounting holes in the enclosure or panel.
2. Remove the six mounting nuts from the hardware bag provided with the display.
3. Position the InView Display in the panel or enclosure mounting hole.
4. Install nuts and alternately tighten the nuts to a torque of 0.904 Nm (8 in-lb).

## Panel Cutout Dimensions

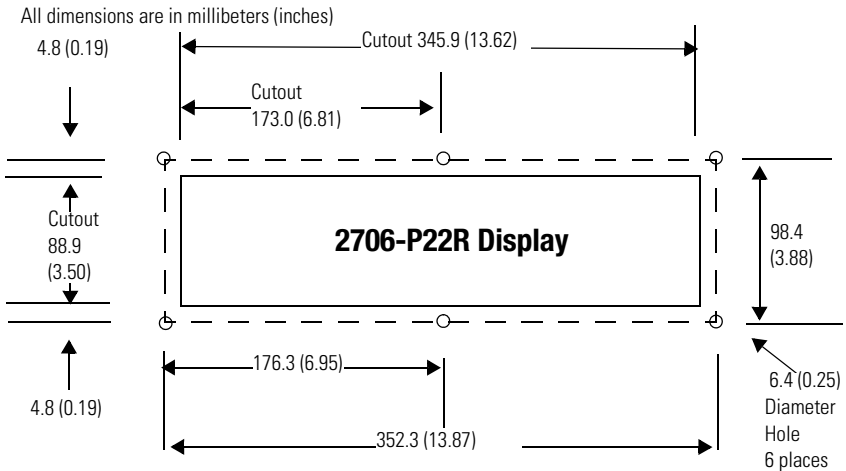

[www.rockwellautomation.com](http://www.rockwellautomation.com)

### Power, Control and Information Solutions Headquarters

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444  
Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 665 0600, Fax: (32) 2 665 0640  
Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846