

# *Installation Instructions*

## **InView Display RS-485 End-of-Line Terminating Resistors**

Catalog Number 2706






# InView Display RS-485 End-of-Line Terminating Resistors

## Terminating Resistors

The last sign on the RS-485 network must have an End-of-Line (EOL) terminator in the sign's RS-232 RJ12 port.

For displays that do not have a self-contained terminator:

Plug the EOL terminator into the RJ12 port of the display labeled P1.

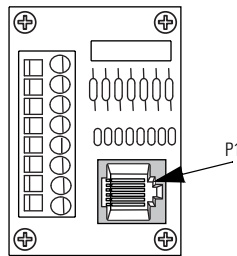

Communication  
Interface Board

[www.rockwellautomation.com](http://www.rockwellautomation.com)

---

**Power, Control and Information Solutions Headquarters**

Americas: Rockwell Automation, 1201 South Second Street, Milwaukee, WI 53204-2496 USA, Tel: (1) 414.382.2000, Fax: (1) 414.382.4444

Europe/Middle East/Africa: Rockwell Automation, Vorstlaan/Boulevard du Souverain 36, 1170 Brussels, Belgium, Tel: (32) 2 663 0600, Fax: (32) 2 663 0640

Asia Pacific: Rockwell Automation, Level 14, Core F, Cyberport 3, 100 Cyberport Road, Hong Kong, Tel: (852) 2887 4788, Fax: (852) 2508 1846

Publication 2706-IN007B-EN-P - October 2002

Supersedes Publication 2706-IN007A-EN-P - April 2001

PN 41061-238-01(2)

© 2002 Rockwell International Corporation. Printed in the U.S.A.