



# 1794sc-IRT8I Install Guide

## Important User Information

Solid-state equipment has operational characteristics differing from those of electromechanical equipment. Safety Guidelines for the Application, Installation, and Maintenance of Solid-State Controls (Publication SGI-1.1 available from your local Rockwell Automation sales office or online at <https://literature.rockwellautomation.com>) describes some important differences between solid-state equipment and hard-wired electromechanical devices. Because of this difference, and also because of the wide variety of uses for solid-state equipment, all persons responsible for applying this equipment must satisfy themselves that each intended application of this equipment is acceptable.

In no event will Spectrum Controls, Inc. be responsible or liable for indirect or consequential damages resulting from the use or application of this equipment.

The examples and diagrams in this manual are included solely for illustrative purposes. Because of the many variables and requirements associated with any particular installation, Spectrum Controls, Inc. cannot assume responsibility or liability for actual use based on the examples and diagrams.

No patent liability is assumed by Spectrum Controls, Inc., with respect to use of information, circuits, equipment, or software described in this manual.

Reproduction of the contents of this manual, in whole or in part, without written permission of Spectrum Controls, Inc., is prohibited.

Throughout this manual we use notes to make you aware of safety considerations.

**WARNING** Identifies information about practices or circumstances that can cause an explosion in a hazardous environment, which may lead to personal injury or death, property damage, or economic loss.



**NOTE** Identifies information that is critical for successful application and understanding of the product.



**ATTENTION** Identifies information about practices or circumstances that can lead to personal injury or death, property damage, or economic loss. Attentions help you identify a hazard, avoid a hazard, and recognize the consequences.



**ATTENTION** **Environment and Enclosure**  
This equipment is intended for use in a Pollution Degree 2 industrial environment, in overvoltage Category II applications (as defined in EN publication 60664-1), at altitudes up to 2000 m (6562 ft) without derating. This equipment is considered Group 1, Class A industrial equipment according to EN/CISPR Publication 11. Without appropriate precautions, there may be potential difficulties ensuring electromagnetic compatibility in other environments due to conducted as well as radiated disturbance. This equipment is supplied as open-type equipment. It must be mounted within an enclosure that is suitably designed for those specific environmental conditions that will be present and appropriately designed to prevent personal injury resulting from accessibility to live parts. The enclosure must have suitable flame-retardant properties to prevent or minimize the spread of flame, complying with a flame spread rating of 5 VA, V2, V1, V0 (or equivalent), if non-metallic. The interior of the enclosure must be accessible only by the use of a tool. Subsequent sections of this publication may contain additional information regarding specific enclosure type ratings that are required to comply with certain product safety certifications. Besides this publication, see: • Industrial Automation Wiring and Grounding Guidelines, for additional installation requirements, Allen-Bradley publication 1770-4.1. • NEMA Standards publication 250 and EN publication 60529, as applicable, for explanations of the degrees of protection provided by different types of enclosure.

**WARNING** If you insert or remove the module while backplane power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.



**ATTENTION** The FLEX I/O system is grounded through the DIN rail to chassis ground. Use zinc-plated, yellow-chromate steel DIN rail to assure proper grounding. The use of other DIN rail materials (such as aluminum or plastic) that can corrode, oxidize, or are poor conductors, can result in improper or intermittent grounding. Secure the DIN rail to mounting surface approximately every 200 mm and use end-anchors appropriately.



**WARNING** If you connect or disconnect wiring while the field side power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.



**WARNING** Listed only when used with Listed Allen-Bradley Cat. NO. 1794-TB3(G) terminal base or equivalent. This device is intended for use with A-B Type 1794 Flex-I/O programmable controller system, or equivalent.



**ATTENTION** **Prevent Electrostatic Discharge**  
This equipment is sensitive to electrostatic discharge, which can cause internal damage and affect normal operation. Follow these guidelines when you handle this equipment:



- Touch a grounded object to discharge potential static.
- Wear an approved grounding wrist strap.
- Do not touch connectors or pins on component boards.
- Do not touch circuit components inside the equipment.
- Use a static-safe workstation, if available.
- Store the equipment in appropriate static-safe packaging when not in use.

## European Hazardous Location Approval

**NOTE** Observe the following additional Zone 2 certification requirements:

- This equipment is not resistant to sunlight or other sources of UV radiation.
- This equipment must be installed in an enclosure providing at least IP54 protection when applied in Class I, Zone 2 environments.
- This equipment shall be used within its specified ratings defined by Spectrum Controls.
- Provision shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 40% when applied in Class I, Zone 2 environments



## North American Hazardous Location Approval

The following information applies when operating this equipment in hazardous locations.	Informations sur l'utilisation de cet équipement en environnements dangereux.
Products marked "CL I, DIV 2, GP A, B, C, D" are suitable for use in Class I Division 2 Groups A, B, C, D, hazardous locations and nonhazardous locations only. Each product is supplied with markings on the rating nameplate indicating the hazardous location temperature code. When combining products within a system, the most adverse temperature code (lowest "T" number) may be used to help determine the overall temperature code of the system. Combinations of equipment in your system are subject to investigation by the local Authority Having Jurisdiction at the time of installation.	Les produits marqués "CL I, DIV 2, GP A, B, C, D" ne conviennent qu'à une utilisation en environnements de Classe I Division 2 Groupes A, B, C, D dangereux et non dangereux. Chaque produit est livré avec des marquages sur sa plaque d'identification qui indiquent le code de température pour les environnements dangereux. Lorsque plusieurs produits sont combinés dans un système, le code de température le plus défavorable (code de température le plus faible) peut être utilisé pour déterminer le code de température global du système. Les combinaisons d'équipements dans le système sont sujettes à inspection par les autorités locales qualifiées au moment de l'installation.

<b>WARNING</b>	<b>EXPLOSION HAZARD</b>	<b>Avertissement</b>	<b>RISQUE D'EXPLOSION</b>
<p><b>WARNING</b> If you insert or remove the module while backplane power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.</p>	<p><b>EXPLOSION HAZARD</b></p> <ul style="list-style-type: none"> <li>• Do not disconnect equipment unless power has been removed or the area is known to be nonhazardous.</li> <li>• Do not disconnect connections to this equipment unless power has been removed or the area is known to be nonhazardous. Secure any external connections that mate to this equipment by using screws, sliding latches, threaded connectors, or other means provided with this product.</li> <li>• Substitution of components may impair suitability for Class I, Division 2.</li> <li>• If this product contains batteries, they must only be changed in an area known to be nonhazardous.</li> </ul>	<p><b>Avertissement</b></p> <ul style="list-style-type: none"> <li>• Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher l'équipement.</li> <li>• Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher les connecteurs. Fixer tous les connecteurs externes reliés à cet équipement à l'aide de vis, loquets coulissants, connecteurs filetés ou autres moyens fournis avec ce produit.</li> <li>• La substitution de composants peut rendre cet équipement inadapté à une utilisation en environnement de Classe I, Division 2.</li> <li>• S'assurer que l'environnement est classé non dangereux avant de changer les piles.</li> </ul>	<p><b>RISQUE D'EXPLOSION</b></p> <ul style="list-style-type: none"> <li>• Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher l'équipement.</li> <li>• Couper le courant ou s'assurer que l'environnement est classé non dangereux avant de débrancher les connecteurs. Fixer tous les connecteurs externes reliés à cet équipement à l'aide de vis, loquets coulissants, connecteurs filetés ou autres moyens fournis avec ce produit.</li> <li>• La substitution de composants peut rendre cet équipement inadapté à une utilisation en environnement de Classe I, Division 2.</li> <li>• S'assurer que l'environnement est classé non dangereux avant de changer les piles.</li> </ul>


### Special Conditions for Safe Use

- This equipment shall be mounted in an ATEX Zone 2 certified enclosure with a minimum ingress protection rating of at least IP54 (in accordance with EN 60079-15) and used in an environment of not more than Pollution Degree 2 (as defined in EN 60664-1) when applied in Zone 2 environments. The enclosure must be accessible only by the use of a tool.
- This equipment shall be used within its specified ratings defined by Rockwell Automation.
- Provision shall be made to prevent the rated voltage from being exceeded by transient disturbances of more than 140% of the peak rated voltage when applied in Zone 2 environments.
- Models 1794sc-IF8IU and 1794sc-IRT8I are to be used with an Allen-Bradley 1794-TB3G or 1794-TB3GS terminal base.

**WARNING**



## Install Your IRT8I Input Module

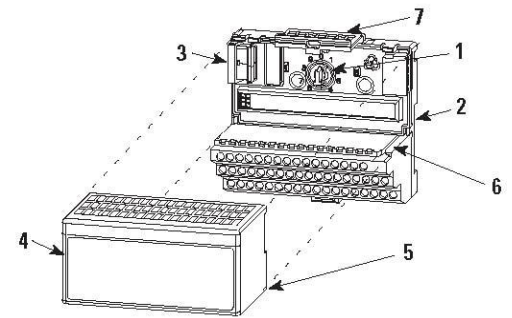

**ATTENTION** During mounting of all devices, be sure that all debris (for example, metal chips or wire strands) is kept from falling into the module. Debris that falls into the module could cause damage on power up.



The module mounts on a 1794-TB3G or 1794-TB3GS terminal base.

1. Rotate the key switch (1) on the terminal base (2) clockwise to position 3 as required for this type of module.
2. Make certain the Flexbus connector (3) is pushed all the way to the left to connect with the neighboring terminal base/adaptor. **You cannot install the module unless the connector is fully extended.**
3. Make sure the pins on the bottom of the module are straight so they will align properly with the connector in the terminal base.

**WARNING** If you remove or insert the module while the backplane power is on, an electrical arc can occur. This could cause an explosion in hazardous location installations. Be sure that power is removed or the area is nonhazardous before proceeding.



4. Position the module (4) with its alignment bar (5) aligned with the groove (6) on the terminal base.
5. Press firmly and evenly to seat the module in the terminal base unit. The module is seated when the latching mechanism (7) is locked into the module.

## Connect Wiring for the 1794-TB3G or 1794-TB3GS Terminal Base

1. Connect individual input wiring and associated signal returns to numbered terminals on the 0...15 row (A) and the 16...33 row (B) as indicated in the table.
2. Use Belden 8761 cable for mV signal wiring, or the appropriate thermocouple wire for your thermocouples.
3. Signal wiring shields can be connected to terminals 16 or 33 on row (B) or terminals 40...45 on row (C).  
Connect the +VDC power lead to terminal 34 on the 34...51 row (C).
4. Connect the -VDC common (return-) to terminal 35 on the 34...51 row (C).

**ATTENTION** To reduce susceptibility to noise, power analog modules and digital modules from separate power supplies. Do not exceed a length of 3 m (9.8 ft) for DC power cabling.



**ATTENTION** Do not daisy-chain power or ground from this terminal base unit to any AC or DC digital module terminal base units.



5. If daisy-chaining power to the next terminal base unit, connect a jumper from terminal 50 (+VDC) on this base unit to +V terminal on the next terminal base unit.  
Connect a jumper from terminal 51 (-VDC common) to the -VDC common terminal on the next terminal base unit.
6. If using cold junction compensators, make these connections as shown in the CJC Sensor chart below.

## Identify RTD Wire Pairs



If the RTD wires are color-coded, the wires that are the same color are connected together. If the wires are not color-coded, use an ohmmeter to determine the pairs as explained below.

## How to Connect a 3-Wire RTD


If the 3-wire RTD wires are all different colors, use an ohmmeter to determine which leads are connected together. Either lead of the pair can be the compensation lead. Attach one lead of the pair to terminal L and the other to +. Attach the single lead to -. Refer to the following table.

### Wire Connections for the Isolated Universal Input Module


#### RTD/Resistance



#### mV Source




#### Thermocouple



Type of Input	Connect the Following				
	R	IN+	IN-	I	Shield <sup>1</sup>
RTD/Res 2-wire		1	2		
RTD/Res 3-wire	0	1	2		
Thermocouple		1	2		
Millivolt		1	2		

<sup>1</sup>Shield can be connected to chassis ground terminals 16, 33, and 40...45.

Numbers 0, 1, 2, and 3 are wiring numbers of the sensor used. For terminal numbers corresponding to R, IN+, IN-, I, refer to Terminal Base Unit Wiring Connections below.

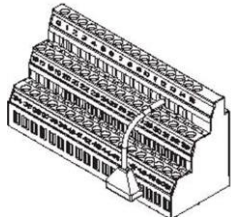


Input	CJC Sensor			
	+	Chassis Ground	-	CJC Tail <sup>1</sup>
CJC1	C37	C38	C39	A1
CJC2	C-46	C-47	C-48	B31

<sup>1</sup>Terminals 37, 38, and 39, and 46, 47, and 48 are for cold junction compensation (with 38 and 47 chassis GND). Connect the tail of CJC 1 to terminal 1 and CJC2 to terminal 31 if channels 0...3 or 0...7 are configured for thermocouples.

The power supply in the current loop to the current inputs (I/O) of the devices may only be an Isolated Secondary Limited Voltage, Class 2, or Limited Voltage/Current power supply.

### Example of Thermocouple Wiring to a 1794-TB3G Terminal Base Unit

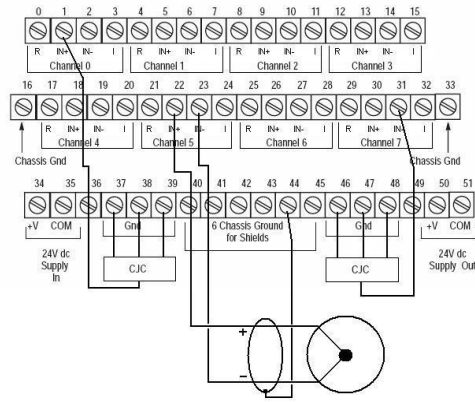

#### Input Map and Configuration (EDT)

The following information is presented for experienced users only. Refer to the user manual, publication 0100153-nn, for complete information on programming and configuring your module.

#### Input Map (Read)

Usage (16 bit words):

I:0	Channel 0 input Data.
I:1	Channel 1 input Data.
I:2	Channel 2 input Data.
I:3	Channel 3 input Data.
I:4	Channel 4 input Data.
I:5	Channel 5 input Data.
I:6	Channel 6 input Data.
I:7	Channel 7 input Data.
S:0	OverRange (CH0/Bit 8, CH1/Bit 9, ...)
S:1	User HI Alarms (CH0/Bit8, CH1/Bit9, ...)
S:2	Reserved
S:3	Reserved

Bit 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 | 0

S:0 OverRange (CH0/Bit 8, CH1/Bit 9, ...) UnderRange (CH0/Bit 0, CH1/Bit 1, ...)

S:1 User HI Alarms (CH0/Bit8, CH1/Bit9, ...) User LO Alarms (CH0/Bit0, CH1/Bit1, ...)

S:2 Reserved CJC Alarm Broken Input Alarms

S:3 Reserved Diagnostics

#### CJC Alarm

Bit 9	Bit 8	CJC Alarm:
0	0	No Errors
0	1	CJC1 is broken.
1	0	CJC2 is broken.
1	1	Both CJC1 and CJC2 are broken.

#### EDT Configuration Table

Usage (16 bit words):

C:0	R <sup>1</sup>	R <sup>1</sup>	F7	F6	F5	F4	R <sup>1</sup>	R <sup>1</sup>	R <sup>1</sup>	F3	F2	F1	F0	R <sup>1</sup>	0
C:1	*F Ch0	DC Ch0	BIM Ch0	R <sup>1</sup>	Data Format Ch0	Input Filter Ch0	Input Type CH0								
C:2	*F Ch1	DC Ch1	BIM Ch1	R <sup>1</sup>	Data Format Ch1	Input Filter Ch1	Input Type CH1								
C:3	*F Ch2	DC Ch2	BIM Ch2	R <sup>1</sup>	Data Format Ch2	Input Filter Ch2	Input Type CH2								
C:4	*F Ch3	DC Ch3	BIM Ch3	R <sup>1</sup>	Data Format Ch3	Input Filter Ch3	Input Type CH3								
C:5	*F Ch4	DC Ch4	BIM Ch4	R <sup>1</sup>	Data Format Ch4	Input Filter Ch4	Input Type CH4								
C:6	*F Ch5	DC Ch5	BIM Ch5	R <sup>1</sup>	Data Format Ch5	Input Filter Ch5	Input Type CH5								
C:7	*F Ch6	DC Ch6	BIM Ch6	R <sup>1</sup>	Data Format Ch6	Input Filter Ch6	Input Type CH6								
C:8	*F Ch7	DC Ch7	BIM Ch7	R <sup>1</sup>	Data Format Ch7	Input Filter Ch7	Input Type CH7								
C:9															
C:10															
C:11															
C:12															
C:13															
C:14															
C:15															
C:16															
C:17															
C:18															
C:19															
C:20															
C:21															
C:22															
C:23															
C:24															
C:25															
C:26															
C:27															
C:28															
C:29															
C:30															
C:31															
C:32															

<sup>1</sup>Reserved for future expansion

#### F0 through F7 (Channel n Fault Mode)

State	Function
0	Disabled
1	Broken input testing enabled

#### Input Type


Bit 4	Bit 3	Bit 2	Bit 1	Bit 0	Range:
0	0	0	0	0	B Type Thermocouple
0	0	0	0	1	C Type Thermocouple
0	0	0	1	0	E Type Thermocouple
0	0	0	1	1	J Type Thermocouple
0	0	1	0	0	K Type Thermocouple
0	0	1	0	1	N Type Thermocouple
0	0	1	1	0	R Type Thermocouple
0	0	1	1	1	S Type Thermocouple
0	1	0	0	0	T Type Thermocouple
0	1	0	0	1	100 Ω Pt α 0.385
0	1	0	1	0	200 Ω Pt α 0.385
0	1	0	1	1	500 Ω Pt α 0.385
0	1	1	0	0	1000 Ω Pt α 0.385
0	1	1	0	1	100 Ω Pt α 0.3916
0	1	1	1	0	200 Ω Pt α 0.3916
0	1	1	1	1	500 Ω Pt α 0.3916
1	0	0	0	0	1000 Ω Pt α 0.3916
1	0	0	0	1	10 Ω Cu α 0.426
1	0	0	1	0	100 Ω Ni α 0.618
1	0	0	1	1	120 Ω Ni α 0.672
1	0	1	0	0	604 Ω NiFe α 0.518
1	0	1	0	1	R 0 to 150 Ω
1	0	1	1	0	R 0 to 1000 Ω
1	0	1	1	1	R 0 to 3000 Ω
1	1	1	0	0	±50 mV
1	1	1	0	1	±100 mV

### Terminal Base Unit Wiring Connections


Channel Number	1794-TB3G and 1794-TB3GS Terminal Base Units			
	Signal Return (R)	Input + (IN+)	Input (-)	I Return (-)
0	A-0	A-1	A-2	A-3
1	A-4	A-5	A-6	A-7
2	A-8	A-9	A-10	A-11
3	A-12	A-13	A-14	A-15
4	B-17	B-18	B-19	B-20
5	B-21	B-22	B-23	B-24
6	B-25	B-26	B-27	B-28
7	B-29	B-30	B-31	B-32

<sup>1</sup>Terminals 16, 33, and 40...45 are chassis ground.

Connections for Terminal Base 1794-TB3G shown

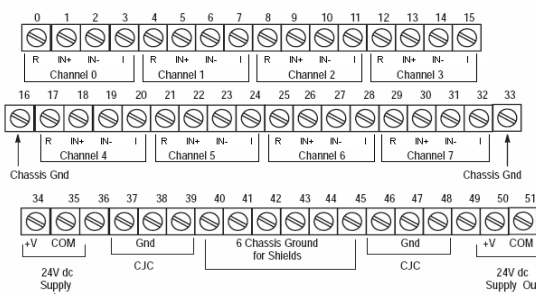

### Example of RTD/Resistance Wiring to a 1794-TB3G Terminal Base Unit

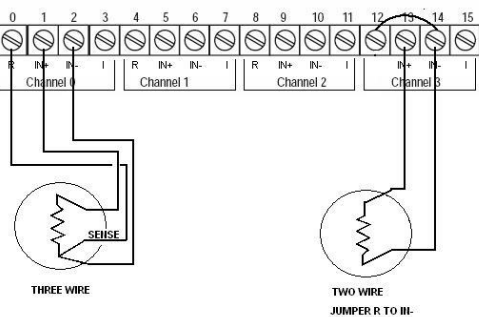

Specifications

Number of inputs	8 channels	
Module Location	Cat. No. 1794-TB3G, 1794-TB3GS Terminal Base Units	
Nominal input voltage ranges	±50 mV, ±100 mV	
Supported thermocouple types	<b>Type °C Range °F Range</b>	
	B 300...1820 °C (572...3308 °F)	
	C 0...2315 °C (32...4199 °F)	
	E -270...1000 °C (-454...1832 °F)	
	J -210...1200 °C (-346...2192 °F)	
	K -270...1370 °C (-454...2498 °F)	
	N -210...1300 °C (-346...2372 °F)	
	R 0...1768 °C (32...3214 °F)	
	S 0...1768 °C (32...3214 °F)	
	T -270...400 °C (-454...752 °F)	
Supported RTD/Resistance types	<b>RTD</b>	
	100 Ω Pt α = 0.385 -200...850 °C (-328...1562 °F)	
	200 Ω Pt α = 0.385 -200...850 °C (-328...1562 °F)	
	500 Ω Pt α = 0.385 -200...850 °C (-328...1562 °F)	
	1000 Ω Pt α = 0.385 -200...850 °C (-328...1562 °F)	
	100 Ω Pt α = 0.392 -200...630 °C (-328...1166 °F)	
	200 Ω Pt α = 0.392 -200...630 °C (-328...1166 °F)	
	500 Ω Pt α = 0.392 -200...630 °C (-328...1166 °F)	
	1000 Ω Pt α = 0.392 -200...630 °C (-328...1166 °F)	
	10 Ω Cu α = 0.426 -100...260 °C (-148...500 °F)	
	100 Ω Ni α = 0.618 -100...260 °C (-148...500 °F)	
	120 Ω Ni α = 0.672 -80...260 °C (-112...500 °F)	
	604 Ω NiFe α = 0.518 -100...200 °C (-148...392 °F)	
	<b>Resistance</b>	
	0...150 Ω	
	0...1000 Ω	
	0...3000 Ω	
	Resolution	16 bits
	Data format	Engineering Units x1 Engineering Units x10 Raw/Proportional Counts Scaled for PID Percent of full scale
	Input Impedance	>1 M Ω for voltage, thermocouple, RTD and resistance inputs 249 Ω ±1% for current inputs
Common mode rejection	60 dB at 5 V peak-to-peak, 50...60 Hz	
Isolation voltage (continuous voltage withstand rating)	User power to Backplane: 24 VDC continuous Channel to Backplane: 24 VDC continuous Channel to Channel: 24 VDC continuous. Channel to User power: 24 VDC continuous	
Open circuit protection	Open circuit detection bias <1 uA with ON/OFF capability	
Overvoltage capability	Voltage mode ±24 VDC continuous (ten minutes) Current mode ±7.8 VDC continuous (ten minutes)	
Cold junction compensation Range	-20...100 °C	
Cold junction compensator	A-B catalog number 1794-CJC2	
Flexbus current	80 mA	
Power dissipation	6.28 W max at 31.2 VDC	
Thermal dissipation	Max 10.2 BTU/Hr at 31.2 VDC	
Key switch position	3	




Accuracy Specifications

Thermocouple Accuracy with 4.17 Hz filter using Linearization per ITS-90	Accuracy Limit At 25 °C 4.17 Hz Filter	Accuracy Limit At 0-55 °C 4.17 Hz Filter	Repeatability Limit At 25 °C & 4.17 Hz filter
Type J (-50 °C to 1200 °C):	±0.6 °C	±2.3 °C	±0.17 °C
Type J (-210 °C to -50 °C):	±0.8 °C	±3.3 °C	±0.25 °C
Type N (-80 °C to 1300 °C):	±1.0 °C	±1.5 °C	±0.3 °C
Type N (-250 °C to -80 °C):	±1.2 °C	±3.0 °C	±1.9 °C
Type T (-180 °C to 400 °C):	±1.0 °C	±1.5 °C	±0.2 °C
Type T (-270 °C to -180 °C):	±5.4 °C	±8.5 °C	±1.5 °C
Type K (-180 °C to 1370 °C):	±1.0 °C	±1.5 °C	±0.3 °C
Type K (-270 °C to -180 °C):	±7.5 °C	±11.5 °C	±3.6 °C
Type E (-130 °C to 1000 °C):	±0.5 °C	±1.5 °C	±0.1 °C
Type E (-270 °C to -130 °C):	±4.2 °C	±7.3 °C	±1.2 °C
Type C (0 °C to 2315 °C):	±1.8 °C	±3.5 °C	±0.9 °C
Type B (600 °C to 1800 °C):	±3.0 °C	±4.0 °C	±1 °C
Type B (300 °C to 600 °C):	±3.0 °C	±8.0 °C	±2 °C
Type S (140 °C to -1760 °C):	±1.7 °C	±2.6 °C	±0.55 °C
Type S (0 °C to 14 °C):	±1.7 °C	±5.0 °C	±1.0 °C
Type R (280 °C to -1760 °C):	±1.7 °C	±2.6 °C	±0.4 °C
Type R (0 °C to 280 °C):	±1.7 °C	±5.0 °C	±1.0 °C
CJC accuracy	±1.0 °C	3.0 °C	±0.8 °C
Resistance Accuracy with 4.17 Hz filter	Accuracy Limit At 25 °C 4.17 Hz Filter	Accuracy Limit At 0-55 °C 4.17 Hz Filter	Repeatability Limit At 25 °C & 4.17 Hz filter
0-150 ohms range	±0.15 ohms	±0.25 ohms	±10 milliohms
0-1000 ohms range	±1.0 ohms	±2.0 ohms	±100 milliohms
0-3000 ohms range	±1.5 ohms	±2.5 ohms	±100 milliohms
RTD Accuracy With 4.17 Hz filters	Accuracy Limit At 25 °C 4.17 Hz Filter	Accuracy Limit At 0-55 °C 4.17 Hz Filter	Repeatability Limit At 25 °C & 4.17 Hz filter
Platinum 385 (100, 200, 500 and 1000 ohms) (IEC751 1983, Amend 2 1995; JISC 1604 1997)	±0.7 °C	±1.2 °C	±0.1 °C
Platinum 3916 (100, 200, 500 and 1000 ohms) (JISC 1604: 1981)	±0.6 °C	±1.1 °C	±0.1 °C
Nickel 618 (100 ohms) (DIN 43760 Sept. 1987)	±0.3 °C	±0.5 °C	±0.1 °C
Nickel 672(120 ohms) (DIN 43760 Sept. 1987)	±0.3 °C	±0.5 °C	±0.1 °C
Nickel-Iron (518) (MINCO Application Aid #18, Date 5/90)	±0.4 °C	±0.7 °C	±0.1 °C
Copper 426 (10 ohms) (SAMA RC21-4-1966)	±2.0 °C	±2.4 °C	±0.1 °C

General Specifications

Voltage range	24 VDC nom
Supply current	240 mA @ 24 VDC
Dimensions (with module installed in base) H x W x D approx.	94 x 94 x 69 mm (3.7 x 3.7 x 2.7 in.)

Environmental Conditions

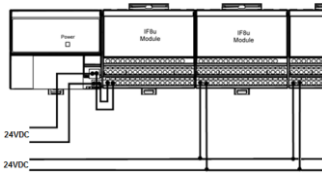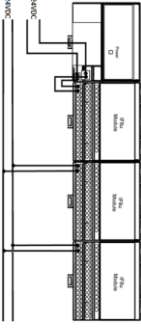Temperature, operating	0 °C to 50 °C (-32 °F to 122 °F) This range applies only to modules installed horizontally as shown:  0 °C to 45 °C (-32 °F to 113 °F) This range applies when modules are installed vertically. When installed vertically, it is recommended that the power supply be located on the top. 
Temperature, storage	-40...85 °C (-40...185 °F)
Relative humidity	IEC 60068-2-30 (Test Db, Unpackaged Damp Heat): 5...95% non-condensing
Vibration	IEC60068-2-6 (Test Fc, Operating): 5 g @ 10...500 Hz
Shock Operating Non-operating	IEC60068-2-27 (Test Ea, Unpackaged shock): 20 g 25 g
Emissions	CISPR 11: Group 1, Class A (with appropriate enclosure)
ESD immunity	IEC 61000-4-2: 6 kV contact discharges 8 kV air discharges
Radiated RF immunity	IEC 61000-4-3: 10 V/m with 1 kHz sine-wave 80% AM from 30...2000 MHz 10 V/m with 200 Hz 50% Pulse 100% AM at 900 MHz 10 V/m with 200 Hz 50% Pulse 100% AM at 1890 MHz
EFT/B immunity	IEC 61000-4-4: ±2 kV at 5 kHz on signal ports
Surge transient immunity	IEC 61000-4-5: ±2 kV line-earth (CM) on shielded ports
Conducted RF immunity	IEC 61000-4-6: 10 V RMS with 1 kHz sine-wave 80% AM from 150 kHz...80 MHz
Enclosure type rating	None (open-style)
Signal conductors Thermocouple Millivolt Category(1)	Use appropriate shielded thermocouple wire(3) Belden 8761 2 - on signal ports
Power conductors Wire size	0.34...2.5 mm <sup>2</sup> (22...12 AWG) solid or stranded copper wire rated at 75 °C (167 °F) or greater 1.2 mm (3/64 in.) insulation max 3 - on power ports
Category(1)	Terminal screw torque for cage-clamp terminal base 0.8 Nm (7 lb-in.)
Certifications (when product is marked) (2)	 <b>UL</b> Listed for Class I, Division 2 Group A, B, C, D Hazardous Locations, certified for U.S. and Canada. See UL File E180101. <b>UL</b> Listed Industrial Control Equipment, certified for U.S. and Canada. See UL File E140954. <b>Ex</b> European Union 2014/34/EU ATEX Directive, compliant with: EN 60079-15:2010; Potentially Explosive Atmospheres, Protection "nA" (Zone 2) II 3 G Ex nA IIC T4 Gc <b>EN 60079-0:2012-A11:2013</b> <b>Certificate DEMKO 09 ATEX 0816599X</b> <b>CE</b> European Union 2014/30/EU EMC Directive, compliant with: EN 61000-6-4; Industrial Emissions EN 50082-2; Industrial Immunity EN 61326; Meas./Control/Lab., Industrial Requirements EN 61000-6-2; Industrial Immunity EN 61131-2; Programmable Controllers (Clause 8, Zone A & B)

- (1) Use this category information for planning conductor routing as described in Industrial Automation Wiring and Grounding Guidelines, Allen-Bradley publication 1770-4.1.
- (2) For the latest up-to-date information, see the Product Certification link at www.spectrumcontrols.com for Declarations of Conformity, Certificates and other certification details.
- (3) Refer to the thermocouple manufacturer for proper thermocouple extension.

产品中有毒物质的名称及含量  
Name and content of hazardous substances in product

模块名称 Module name(s) 1794sc-IR8U (Universal) 1794sc-IR8I (Combo RTD and TC)	有害物质 Hazardous substances					
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr(VI))	多溴联苯 Polybrominated Biphenyls (PBBs)	多溴二苯醚 Polybrominated Diphenyl Ethers (PBDE)
印刷电路板组件 Printed Circuit Board Assemblies	X	O	O	O	O	O
金属部件 Metal Components	O	O	O	O	O	O
塑料部件 Plastic Components	O	O	O	O	O	O

本表格依据5/11364的规定编制。This table is made per guidance of 5/11364  
O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。  
O: Indicates that this hazardous substance contained in all of the homogeneous materials for the part is below the limit requirement in GB/T 26572.  
X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。  
X: Indicates that this hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.  
(企业可在此处, 根据实际情况下表中打“X”的技术原因进行进一步说明。)  
(According to actual situation, extra explanations can be given here for the technical reasons of items with "X".)



1705 132nd Ave NE  
Bellevue, WA 98005 USA  
Tel: 425-746-9481  
Fax: 425-641-9473  
Email: spectrum@spectrumcontrols.com  
Web: www.spectrumcontrols.com